

DIAGNOSING WORN OUT CV COMPONENTS

1 Torn Boot

Check for grease deposits under the vehicle in the vicinity of the CV Joint.

Remedy- if no noise, suggest check all boots. If boots split or cracked-remove boots, clean all joints thoroughly, regrease them and replace with new boot kits.

2 CLICKING OR HUMMING

Verify by driving on a smooth surface testing for noise while turning in either direction. Remedy- replace outer CV Joint or complete CV Shaft.

3 VIBRATION

Verify by driving on a smooth surface straight ahead putting load on vehicle. If you detect a vibration or shudder, replace inner CV Joint or complete CV Shaft.

IF YOU ARE UNSURE PLEASE CALL OUR CUSTOMER SERVICE HOTLINE ON 1800 105 240 AND ASK TO SPEAK WITH A TECHNICAL CONSULTANT. THIS ADVISE IS GIVEN FREE OF CHARGE.

